

# Accessory

**C**  **US**

GB

  
**OHM-B**

  
**OHM-A**



## COMBIVERT

INSTRUCTION MANUAL

Braking Resistors

# Contents

---

<b>1.</b>	<b>Braking Resistors .....</b>	<b>3</b>
1.1	Selection of braking resistor:.....	3
1.2	Braking ramp.....	3
1.3	Calculation formula .....	4
1.4	Beside mounted braking resistor - technical data .....	5
1.5	Beside mounted braking resistors - dimensions .....	7
1.6	Parallel connection of braking resistors of the sizes 24...30 .....	8
1.7	Installation instructions.....	9
1.8	Selection of the connection type .....	9
1.9	Connection of a braking resistor without temperature monitoring.....	9
1.10	Connection of a braking resistor with simple temperature monitoring .....	10
1.11	Connection of a braking resistor with extended temperature monitoring.....	10
1.12	Connection of a fault sensing .....	11

## 1. Braking Resistors

The KEB COMBIVERT fitted with an external braking resistor is suitable for a limited 4-quadrant operation. The braking energy, refeed into the DC-bus at generatoric operation, is dissipated over the braking transistor to the braking resistor.

Different braking resistors are available for the KEB COMBIVERT. Please refer to the next page for the corresponding formula and restrictions (valid range).

### 1.1 Selection of braking resistor:

1. Preset desired braking time.
2. Calculate braking time without braking resistor ( $t_{Bmin}$ ).
3. A braking resistor is necessary if the desired braking time is smaller than the calculated braking time ( $t_B < t_{Bmin}$ ).
4. Calculate braking torque ( $M_B$ ). Take the load torque into account at the calculation.
5. Calculate peak braking power ( $P_B$ ). The peak braking power must always be calculated for the worst case ( $n_{max}$  to standstill).
6. Selection of braking resistor:
  - a) Peak power of the braking resistor  $P_S \geq$  peak braking power  $P_B$
  - b)  $P_N$  is to be selected according to the cycle time.

The resistance values shall not decrease the min. permissible value of the braking transistors. The minimum braking resistor can be taken from the technical data of the inverter documentation.

The maximum cyclic duration of a braking resistor shall not be exceeded. For a longer cyclic duration time special designed braking resistors are necessary. The continuous output of the braking transistor must be taken into consideration.

7. Check, whether the desired braking time ( $t_{Bmin}$ ) is attained with the braking resistor.

Restriction: Under consideration of the rating of the braking resistor and the brake power of the motor, the braking torque may not exceed 1,5times of the rating torque of the motor (see formula).

When utilizing the maximum possible braking torque the frequency inverter must be dimensioned for the higher current.

### 1.2 Braking ramp

The braking ramp is adjusted at the frequency inverter. If it was selected too small, the KEB COMBIVERT switches off automatically and error message overvoltage (E.OP) or overcurrent (E.OC) is displayed. The approximate braking time can be determined according to following formula.

# Braking Resistors

## 1.3 Calculation formula

**Braking time without braking resistor**

$$t_{Bmin} = \frac{(J_M + J_L) \cdot (n_1 - n_2)}{9.55 \cdot (K \cdot M_N + M_L)}$$

Valid range:  $n_1 > n_N$  (field weakening range)

**Required braking torque**

$$M_B = \frac{(J_M + J_L) \cdot (n_1 - n_2)}{9.55 \cdot t_B} - M_L$$

Conditions:  $M_B \leq 1.5 \cdot M_N$ ;  $f \leq 70$  Hz

**Peak braking power**

$$P_B = \frac{M_B \cdot n_1}{9.55}$$

Condition:  $P_B < P_S$

**Braking time with braking resistor**

$$t_{Bmin} = \frac{(J_M + J_L) \cdot (n_1 - n_2)}{9.55 \cdot (K \cdot M_N + M_L + \frac{P_R \cdot 9.55}{(n_1 - n_2)})}$$

Valid range:  $n_1 > n_N$

Conditions:  $\frac{P_S \cdot 9.55}{(n_1 - n_2)} \leq M_N \cdot (1.5 - K)$

$f \leq 70$  Hz

$P_B \leq P_S$


**Cyclic duration factor**

cdf for  $t_z \leq 120$  s

$$cdf = \frac{t_B}{t_z} \cdot 100 \%$$

cdf for  $t_z > 120$  s

$$cdf = \frac{t_B}{120 \text{ s}} \cdot 100 \%$$

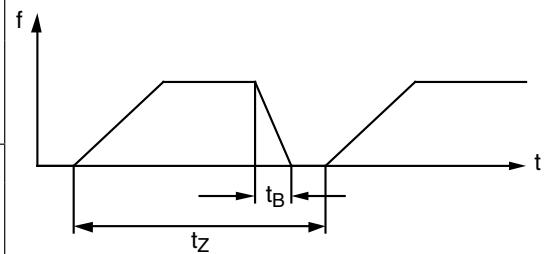

### Legend

$J_M$	=	mass moment of inertia motor	[kgm <sup>2</sup> ]
$J_L$	=	mass moment of inertia load	[kgm <sup>2</sup> ]
$n_1$	=	motor speed prior to deceleration	[rpm]
$n_2$	=	motor speed after deceleration (standstill = 0 rpm)	[rpm]
$n_N$	=	Rated motor speed	[rpm]
$M_N$	=	Rated motor torque	[Nm]
$M_B$	=	required braking torque	[Nm]
$M_L$	=	load torque	[Nm]
$t_B$	=	required braking time	[s]
$t_{Bmin}$	=	minimum braking time	[s]
$t_z$	=	Cycle time	[s]
$P_B$	=	peak braking power	[W]
$P_S$	=	peak power of braking resistor	[W]
$K$	=	0.25 for motors to 1.5 kW (default three-phase asynchronous motor) 0.20 for motors 2.2...4 kW 0.15 for motors 5.5...11 kW 0.08 for motors 15...45 kW 0.05 for motors > 45 kW	
cdf	=	Cyclic duration factor	

## 1.4 Beside mounted braking resistor - technical data

Part number	Number of modules	R	P <sub>D</sub>	P <sub>S</sub>	cdf	Terminals		Core cross-section	
		Ω	[W]	[kW]	[s]	[AWG]	[mm <sup>2</sup> ]	[AWG]	[mm <sup>2</sup> ]
<b>230 V class</b>									
07.BR.100-1180	1	180	44	0.8	6	–	–	16	1.5
09.BR.100-1100	1	100	82	1.5	6	–	–	14	2.5
10.BR.100-1683	1	68	120	2.2	6	–	–	14	2.5
12.BR.100-1333	1	33	250	4.2	6	–	–	14	2.5
13.BR.100-1273	1	27	300	5.1	6	–	–	12	4
14.BR.100-1203	1	20	410	6.9	6	–	–	12	4
15.BR.110-1133	1	13	630	10	6	12	4	12	4
15.BR.226-3806	1	8	2500	17	30	6	16	8	10
16.BR.110-1103	1	10	780	14	6	12	4	12	4
16.BR.110-3606	1	6	3000	23	30	6	16	8	10
17.BR.110-1073	1	7	1200	22	6	12	4	12	4
17.BR.226-3516	1	5.6	4000	27	30	6	16	6	16
18.BR.226-1406	1	4	1800	29	6	6	10	6	16
18.BR.226-3416	1	4.1	5000	33	30	6	16	6	16
19.BR.226-1306	1	3	2000	45	6	6	16	6	16
19.BR.226-3306	1	3	7500	45	30	6	16	6	16
20.BR.226-3426	1	2.4	10000	57	6	6	16	6	16
21.BR.226-1206	1	2	4000	68	6	2x6	2x16	2x6	2x16
<b>400 V class</b>									
07.BR.100-6620	1	620	56	0.9	6	–	–	16	1.5
09.BR.100-6390	1	390	90	1.5	6	–	–	16	1.5
10.BR.100-6270	1	270	130	2.1	6	–	–	16	1.5
11.BR.100-6180	1	180	190	3.2	6	–	–	14	2.5
12.BR.100-6150	1	150	230	3.85	6	–	–	14	2.5
13.BR.100-6110	1	110	350	5	6	–	–	14	2.5
14.BR.100-6853	1	85	410	6.9	6	–	–	14	2.5
14.BR.226-7853	1	85	600	12	18	8	10	12	4
14.BR.226-8453	1	40	3400	12	48	6	16	10	6
15.BR.110-6563	1	56	620	10	6	12	4	12	4
15.BR.226-8303	1	30	4000	17	48	2x6	2x16	10	6
16.BR.110-6423	1	42	820	14	6	12	4	12	4
16.BR.226-7423	1	42	1200	15	18	8	10	10	6
17.BR.110-6303	1	30	1200	19	6	12	4	12	4
17.BR.226-7273	1	27	1800	22	18	8	10	8	10
18.BR.226-6203	1	20	1700	29	6	8	10	8	10
18.BR.226-8203	3	20	15000	38	30	2x6	2x16	2x8	2x10
19.BR.226-6153	1	15	2300	38	6	8	10	8	10
20.BR.226-6123	1	12	2900	48	6	6	16	6	16
PD	<i>Continuous power</i>								
PS	<i>Peak load, max. for specified ON period</i>								
cdf	<i>ON time referring to a cycle time of 120 s</i>								
	<i>recommended core cross- section per module</i>								

# Braking Resistors

Part number	Number of modules	R	P <sub>D</sub>	P <sub>S</sub>	cdf	Terminals		Core cross-section	
		Ω	[W]	[kW]		[s]	[AWG]	[mm <sup>2</sup> ]	[AWG]
21.BR.226-6103	1	10	3000	53	6	6	16	6	16
22.BR.226-6866	1	8.6	4000	68	6	2x6	2x16	2x6	2x16
23.BR.226-6676	1	6.7	5200	86	6	2x6	2x16	2x6	2x16
24.BR.226-6506	2	5	6900	115	6	2x6	2x16	2x6	2x16
25.BR.226-6436	2	4.3	8100	135	6	2x6	2x16	2x6	2x16
26.BR.226-6386	2	3.8	9200	154	6	2x6	2x16	2x6	2x16
27.BR.226-6336	2	3.3	10000	173	6	2x6	2x16	2x6	2x16
28.BR.226-6226	3	2.2	15000	260	6	2x6	2x16	2x6	2x16
29.BR.226-6176	4	1.7	20000	340	6	2x6	2x16	2x6	2x16
30.BR.226-6136	5	1.3	26000	440	6	2x6	2x16	2x6	2x16
PD	<i>Continuous power</i>								
PS	<i>Peak load, max. for specified ON period</i>								
cdf	<i>ON time referring to a cycle time of 120s</i>								
	<i>recommended core cross- section per module</i>								

The calculated peak braking power must be smaller than the maximum load capacity of the resistance. Please contact KEB if the value is not reached.

## Response threshold and electrical specifications of the installed thermojunctions



Part number	Temperature	Switch type	max. load
xx.BR.100-xxxx	160 °C	NC contact	250 VAC/0.5A
xx.BR.110-xxxx	160 °C	NC contact	30 VDC/0.5A
xx.BR.226-xxxx	240 °C	NC contact	250 VAC/3A 30 VDC/3A

## 1.5 Beside mounted braking resistors - dimensions

	<table border="1"> <thead> <tr> <th>Part number</th> <th>A</th> <th>A1</th> <th>A2</th> <th>B</th> <th>C</th> <th>GB</th> </tr> </thead> <tbody> <tr> <td>07.BR.100-xxxx</td> <td>160</td> <td>145</td> <td>1120</td> <td>26</td> <td>40</td> <td>6</td> </tr> <tr> <td>09.BR.100-xxxx</td> <td>240</td> <td>222</td> <td>1060</td> <td>26</td> <td>40</td> <td>6</td> </tr> <tr> <td>10.BR.100-xxxx</td> <td>300</td> <td>285</td> <td>1030</td> <td>26</td> <td>40</td> <td>6</td> </tr> <tr> <td>11.BR.100-xxxx</td> <td>240</td> <td>225</td> <td>1085</td> <td>28</td> <td>80</td> <td>5.5</td> </tr> <tr> <td>12.BR.100-xxxx</td> <td>300</td> <td>285</td> <td>1055</td> <td>28</td> <td>80</td> <td>5.5</td> </tr> <tr> <td>13.BR.100-xxxx</td> <td>400</td> <td>400</td> <td>1005</td> <td>28</td> <td>80</td> <td>5.5</td> </tr> <tr> <td>14.BR.100-xxxx</td> <td>400</td> <td>400</td> <td>1005</td> <td>28</td> <td>80</td> <td>5.5</td> </tr> </tbody> </table>	Part number	A	A1	A2	B	C	GB	07.BR.100-xxxx	160	145	1120	26	40	6	09.BR.100-xxxx	240	222	1060	26	40	6	10.BR.100-xxxx	300	285	1030	26	40	6	11.BR.100-xxxx	240	225	1085	28	80	5.5	12.BR.100-xxxx	300	285	1055	28	80	5.5	13.BR.100-xxxx	400	400	1005	28	80	5.5	14.BR.100-xxxx	400	400	1005	28	80	5.5
Part number	A	A1	A2	B	C	GB																																																			
07.BR.100-xxxx	160	145	1120	26	40	6																																																			
09.BR.100-xxxx	240	222	1060	26	40	6																																																			
10.BR.100-xxxx	300	285	1030	26	40	6																																																			
11.BR.100-xxxx	240	225	1085	28	80	5.5																																																			
12.BR.100-xxxx	300	285	1055	28	80	5.5																																																			
13.BR.100-xxxx	400	400	1005	28	80	5.5																																																			
14.BR.100-xxxx	400	400	1005	28	80	5.5																																																			
	<table border="1"> <thead> <tr> <th>Part number</th> <th>A</th> <th>A1</th> <th>A2</th> </tr> </thead> <tbody> <tr> <td>15.BR.110-xxxx</td> <td>370</td> <td>355</td> <td>300</td> </tr> <tr> <td>16.BR.110-xxxx</td> <td>470</td> <td>455</td> <td>400</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Part number</th> <th>A</th> <th>A1</th> <th>A2</th> </tr> </thead> <tbody> <tr> <td>17.BR.110-xxxx</td> <td>470</td> <td>455</td> <td>400</td> </tr> </tbody> </table>	Part number	A	A1	A2	15.BR.110-xxxx	370	355	300	16.BR.110-xxxx	470	455	400	Part number	A	A1	A2	17.BR.110-xxxx	470	455	400																																				
Part number	A	A1	A2																																																						
15.BR.110-xxxx	370	355	300																																																						
16.BR.110-xxxx	470	455	400																																																						
Part number	A	A1	A2																																																						
17.BR.110-xxxx	470	455	400																																																						
	<table border="1"> <thead> <tr> <th>Part number</th> <th>C</th> </tr> </thead> <tbody> <tr> <td>18.BR.226-6203</td> <td>116</td> </tr> <tr> <td>19.BR.226-6153</td> <td>116</td> </tr> <tr> <td>20.BR.226-6123</td> <td>223</td> </tr> <tr> <td>21.BR.226-6103</td> <td>223</td> </tr> <tr> <td>22.BR.226-6866</td> <td>273</td> </tr> <tr> <td>23.BR.226-6676</td> <td>273</td> </tr> <tr> <td>24.BR.226-6506</td> <td>= 2 x 21.BR.226-6103</td> </tr> <tr> <td>25.BR.226-6436</td> <td>= 2 x 22.BR.226-6866</td> </tr> <tr> <td>26.BR.226-6386</td> <td>= 1 x 22.BR.226-6866+ 1 x 23.BR.226-6676</td> </tr> <tr> <td>27.BR.226-6336</td> <td>= 2 x 23.BR.226-6676</td> </tr> <tr> <td>28.BR.226-6226</td> <td>= 3 x 23.BR.226-6676</td> </tr> <tr> <td>29.BR.226-6176</td> <td>= 4 x 23.BR.226-6676</td> </tr> <tr> <td>30.BR.226-6136</td> <td>= 5 x 23.BR.226-6676</td> </tr> </tbody> </table>	Part number	C	18.BR.226-6203	116	19.BR.226-6153	116	20.BR.226-6123	223	21.BR.226-6103	223	22.BR.226-6866	273	23.BR.226-6676	273	24.BR.226-6506	= 2 x 21.BR.226-6103	25.BR.226-6436	= 2 x 22.BR.226-6866	26.BR.226-6386	= 1 x 22.BR.226-6866+ 1 x 23.BR.226-6676	27.BR.226-6336	= 2 x 23.BR.226-6676	28.BR.226-6226	= 3 x 23.BR.226-6676	29.BR.226-6176	= 4 x 23.BR.226-6676	30.BR.226-6136	= 5 x 23.BR.226-6676																												
Part number	C																																																								
18.BR.226-6203	116																																																								
19.BR.226-6153	116																																																								
20.BR.226-6123	223																																																								
21.BR.226-6103	223																																																								
22.BR.226-6866	273																																																								
23.BR.226-6676	273																																																								
24.BR.226-6506	= 2 x 21.BR.226-6103																																																								
25.BR.226-6436	= 2 x 22.BR.226-6866																																																								
26.BR.226-6386	= 1 x 22.BR.226-6866+ 1 x 23.BR.226-6676																																																								
27.BR.226-6336	= 2 x 23.BR.226-6676																																																								
28.BR.226-6226	= 3 x 23.BR.226-6676																																																								
29.BR.226-6176	= 4 x 23.BR.226-6676																																																								
30.BR.226-6136	= 5 x 23.BR.226-6676																																																								

# Braking Resistors

## 1.6 Parallel connection of braking resistors of the sizes 24...30

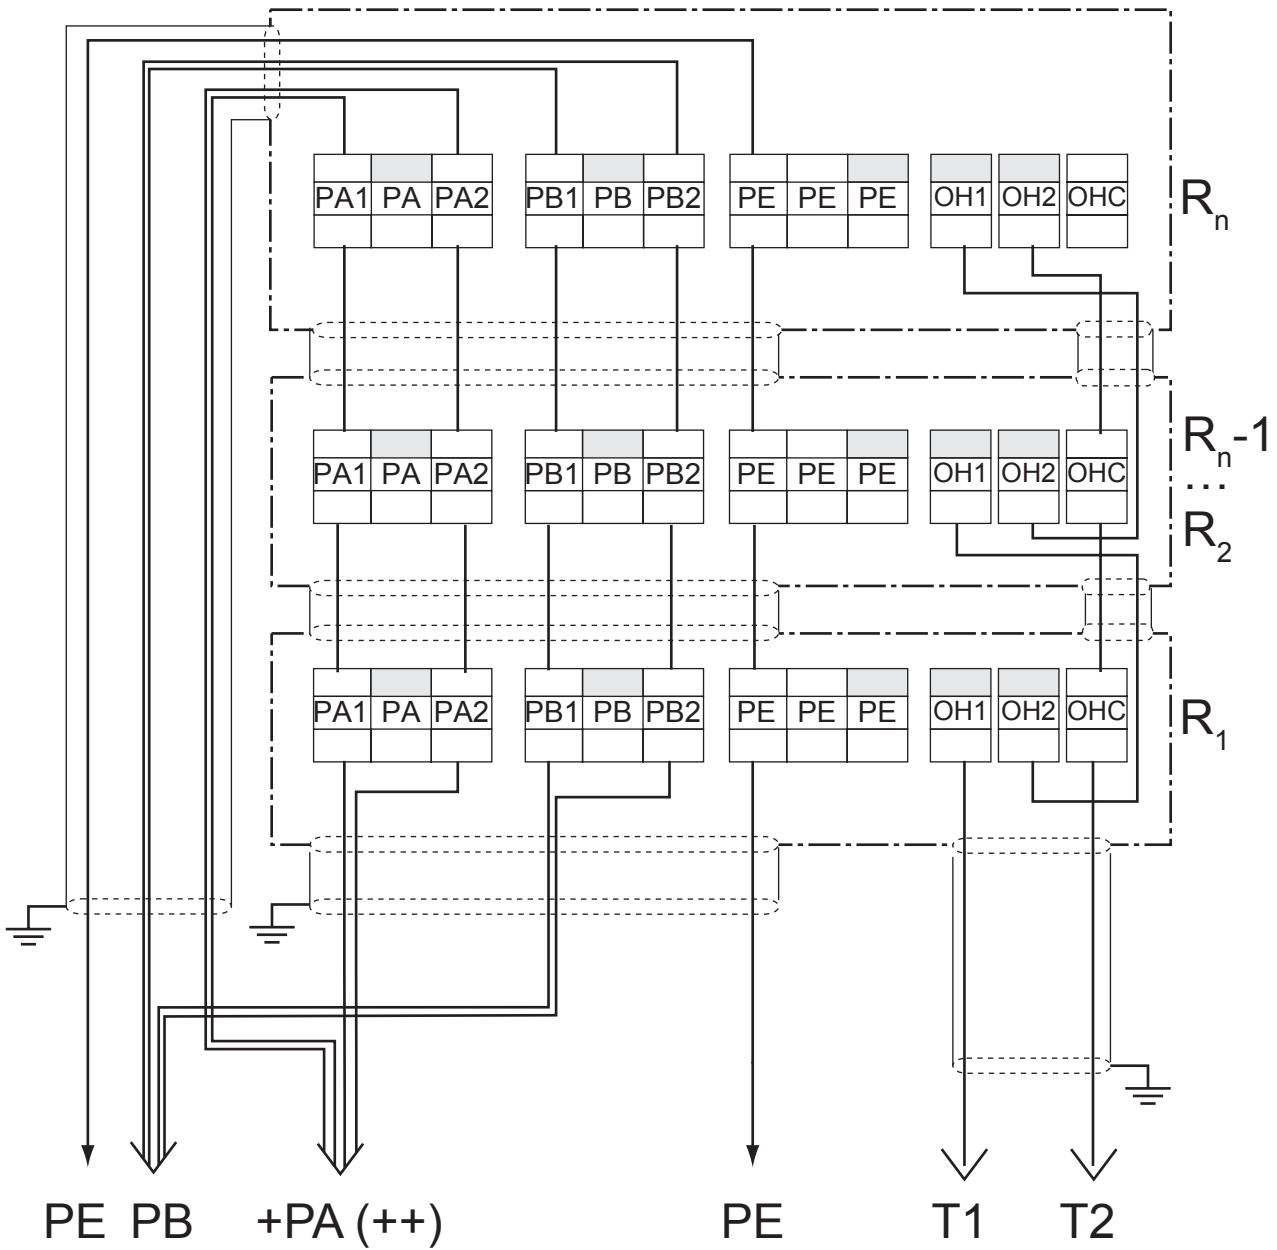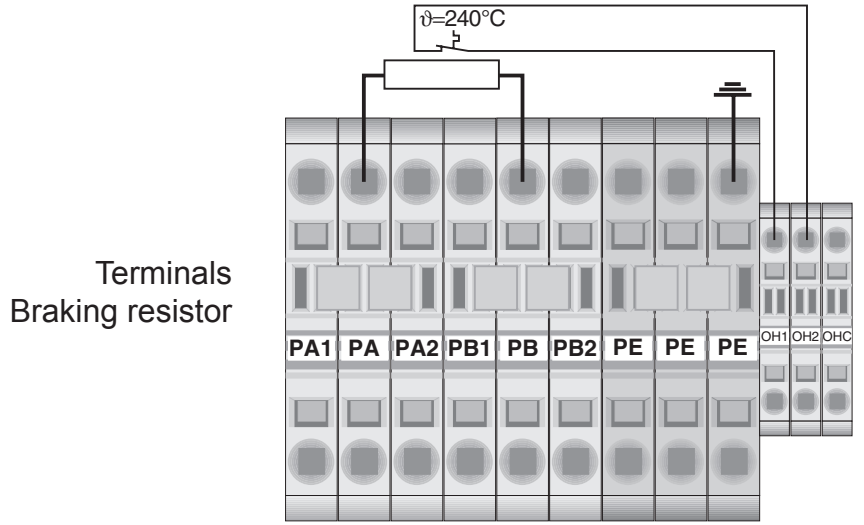



## 1.7 Installation instructions

Braking resistors can evolve very high surface temperatures during normal operation. The following points must be considered absolutely for safe operation:


• Select minimum distances to adjacent units in such way that neither fire risk nor malfunctions increased by ambient temperature releases.	
• Sufficient cooling must be available when the unit is installed in a control cabinet.	
• A warning notice "hot surface" must be placed in case of structural measures if a protection against contact for the service personnel cannot be ensured.	
• Connect temperature monitoring of the braking resistors	
• Make fire preventions if necessary.	

## 1.8 Selection of the connection type

Monitored malfunction	Extended temperature monitoring		
	Simple temperature monitoring		
	Without temperature monitoring		
Ramps too short	–	○	○
ON period too long	–	○	○
Wrong dimensioning of the braking resistor	–	○	○
input voltage too high	–	○	○
Generatoric operation	–	○	○ <sup>1)</sup>
Short circuit in the braking transistor	–	–	○
Short circuit in the braking transistor (generating)	–	–	○ <sup>1)</sup>

1) The frequency inverter remains in operation in spite of switched off power supply in generatoric operation. An error must be released here, which leads to the disconnection of the modulation. This can occur e.g. via an additional auxiliary contact at the line contactor K1 (terminals 13/14) at terminals T1/T2 or via digital input. The frequency inverter must be programmed accordingly in each case.


## 1.9 Connection of a braking resistor without temperature monitoring

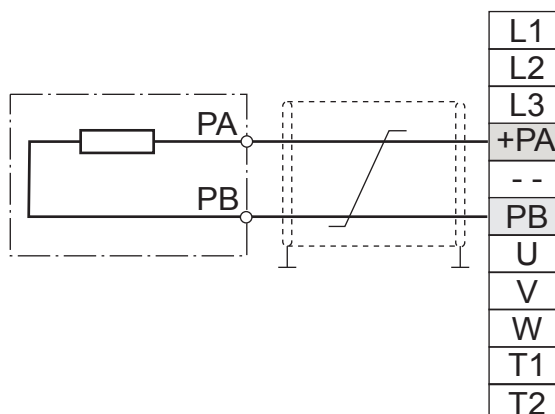

# Braking Resistors


## 1.10 Connection of a braking resistor with simple temperature monitoring

This circuit releases a overtemperature error in the frequency inverter. A short circuit in the braking transistor is detected indirectly by the temperature, but it does not lead to the disconnection of the mains voltage. This connection cannot be used without external measures, if increased fire protection is required.

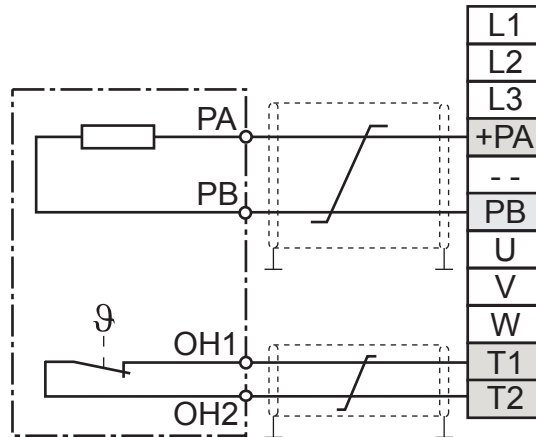

## 1.11 Connection of a braking resistor with extended temperature monitoring


Protection in case of defective braking transistor is only available with switching off the mains voltage. This connection must be used if increased fire protection is required.

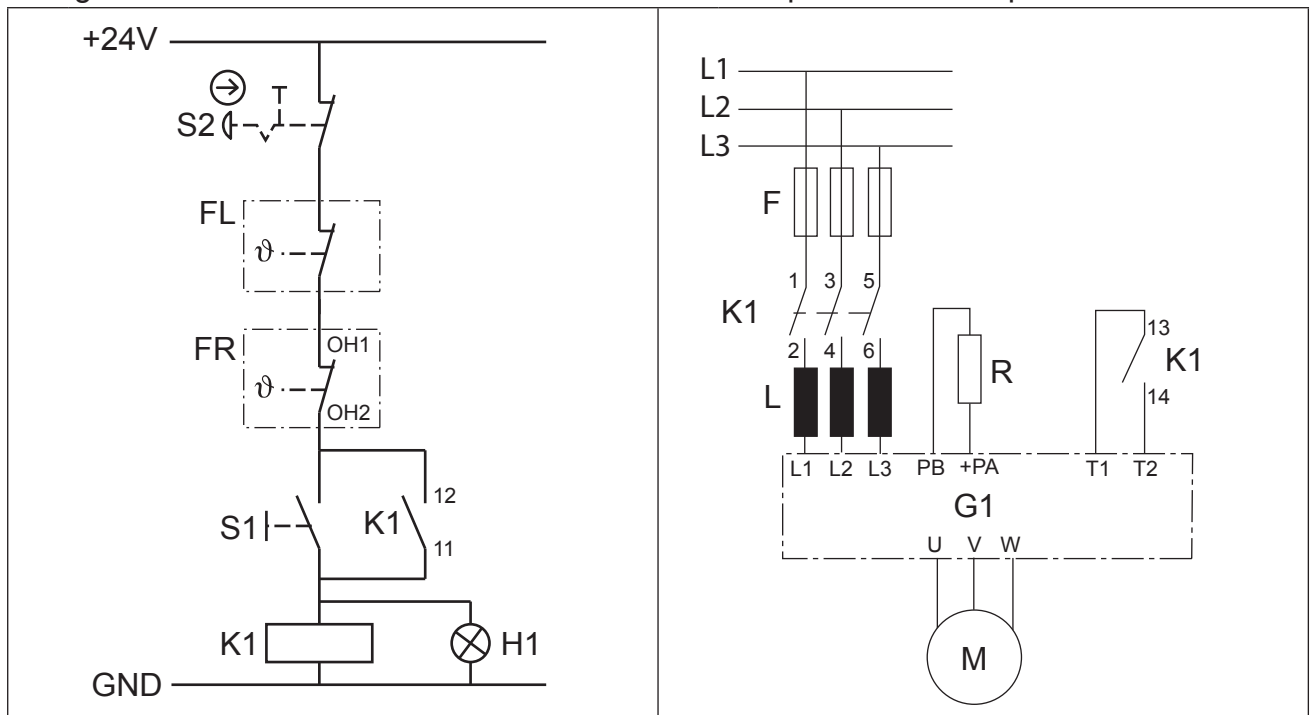

K1	Line contactor with auxiliary contacts	M	Motor
S1	Pushbutton or contact of superior control for switching on	F	Main fuses
S2	Emergency stop switch or contact of superior control for switching off	FL	Temperature switch of further monitoring objects (e.g. choke)
H1	Control of the tripping or signal for evaluation electronics	FR	Temperature switch of braking resistor
G1	Frequency inverter	R	Braking resistor
I	Mains choke (optional)		

## 1.12 Connection of a fault sensing

- Do not place connection cable parallel with control cables
- Terminals T1 and T2 (conform to DIN EN 60947-8)
- Tripping resistance 1650...4000  $\Omega$
- Reset resistance 750...1650  $\Omega$
- **The evaluation of the input must be activated in the software.**

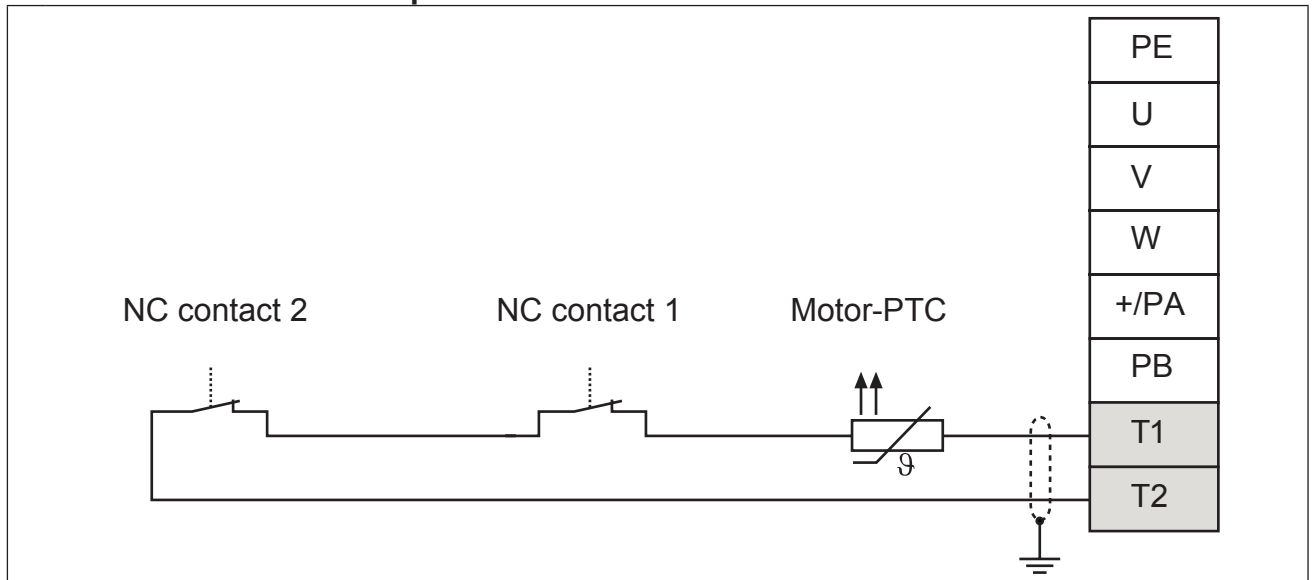

Bei Geräten mit PT100-/KTY-Auswertung dürfen keine Temperaturschalter in die Erfassungskette eingebaut werden, da eventuell Messverfälschungen auftreten oder die Kontakte versotten können. Another protective measure must be used for these units (e.g. programmed digital output leads in switching off of power supply).



**Karl E. Brinkmann GmbH**  
Försterweg 36-38 • D-32683 Barntrup  
fon: +49 5263 401-0 • fax: +49 5263 401-116  
net: [www.keb.de](http://www.keb.de) • mail: [info@keb.de](mailto:info@keb.de)

**KEB Antriebstechnik GmbH & Co. KG**  
Wildbacher Str. 5 • D-08289 Schneeberg  
fon: +49 3772 67-0 • fax: +49 3772 67-281  
mail: [info@keb-combidrive.de](mailto:info@keb-combidrive.de)

**KEB Antriebstechnik Austria GmbH**  
Ritzstraße 8 • A-4614 Marchtrenk  
fon: +43 7243 53586-0 • fax: +43 7243 53586-21  
net: [www.keb.at](http://www.keb.at) • mail: [info@keb.at](mailto:info@keb.at)

**KEB Antriebstechnik**  
Herenveld 2 • B-9500 Geraadsbergen  
fon: +32 5443 7860 • fax: +32 5443 7898  
mail: [vb.belgien@keb.de](mailto:vb.belgien@keb.de)

**KEB Power Transmission Technology (Shanghai) Co.  
Ltd – Office Room 401**

No. 665 North Songwei Road (New Husong Road),  
Songjiang District, **CHN**-201613 Shanghai, P.R. China  
fon: +86 21 51095995 • fax: +86 21 54450115  
net: [www.keb.cn](http://www.keb.cn) • mail: [info@keb.cn](mailto:info@keb.cn)

**KEB Antriebstechnik Austria GmbH**  
Organizační složka  
K. Weise 1675/5 • **CZ**-370 04 České Budějovice  
fon: +420 387 699 111 • fax: +420 387 699 119  
net: [www.keb.cz](http://www.keb.cz) • mail: [info.keb@seznam.cz](mailto:info.keb@seznam.cz)

**KEB España**  
C/ Mitjter, Nave 8 - Pol. Ind. LA MASIA  
E-08798 Sant Cugat Sesgarrigues (Barcelona)  
fon: +34 93 897 0268 • fax: +34 93 899 2035  
mail: [vb.espana@keb.de](mailto:vb.espana@keb.de)

**Société Française KEB**  
Z.I. de la Croix St. Nicolas • 14, rue Gustave Eiffel  
F-94510 LA QUEUE EN BRIE  
fon: +33 1 49620101 • fax: +33 1 45767495  
net: [www.keb.fr](http://www.keb.fr) • mail: [info@keb.fr](mailto:info@keb.fr)

**KEB (UK) Ltd.**

6 Chieftain Business Park, Morris Close  
Park Farm, Wellingborough **GB**-Northants, NN8 6 XF  
fon: +44 1933 402220 • fax: +44 1933 400724  
net: [www.keb-uk.co.uk](http://www.keb-uk.co.uk) • mail: [info@keb-uk.co.uk](mailto:info@keb-uk.co.uk)

**KEB Italia S.r.l.**

Via Newton, 2 • I-20019 Settimo Milanese (Milano)  
fon: +39 02 33535311 • fax: +39 02 33500790  
net: [www.keb.it](http://www.keb.it) • mail: [kebitalia@keb.it](mailto:kebitalia@keb.it)

**KEB Japan Ltd.**

15-16, 2-Chome, Takanawa Minato-ku  
J-Tokyo 108-0074  
fon: +81 33 445-8515 • fax: +81 33 445-8215  
mail: [info@keb.jp](mailto:info@keb.jp)

**KEB Korea Seoul**

Room 1709, 415 Missy 2000  
725 Su Seo Dong, Gang Nam Gu  
**ROK**-135-757 Seoul/South Korea  
fon: +82 2 6253 6771 • fax: +82 2 6253 6770  
mail: [vb.korea@keb.de](mailto:vb.korea@keb.de)

**KEB RUS Ltd.**

Dolgorukovskaja str. 33, building 8  
**RUS**-127006 Moscow  
fon: +007 499 972 3162 • fax: +007 499 978 9573  
mail: [info@keb.ru](mailto:info@keb.ru)

**KEB Sverige**

Box 265 (Bergavägen 19)  
**S**-43093 Hälsö  
fon: +46 31 961520 • fax: +46 31 961124  
mail: [vb.schweden@keb.de](mailto:vb.schweden@keb.de)

**KEB America, Inc.**

5100 Valley Industrial Blvd. South  
**USA**-Shakopee, MN 55379  
fon: +1 952 224-1400 • fax: +1 952 224-1499  
net: [www.kebamerica.com](http://www.kebamerica.com) • mail: [info@kebamerica.com](mailto:info@kebamerica.com)